


# Chief Temporary Storage Ring Installation Guide

January 1, 2018

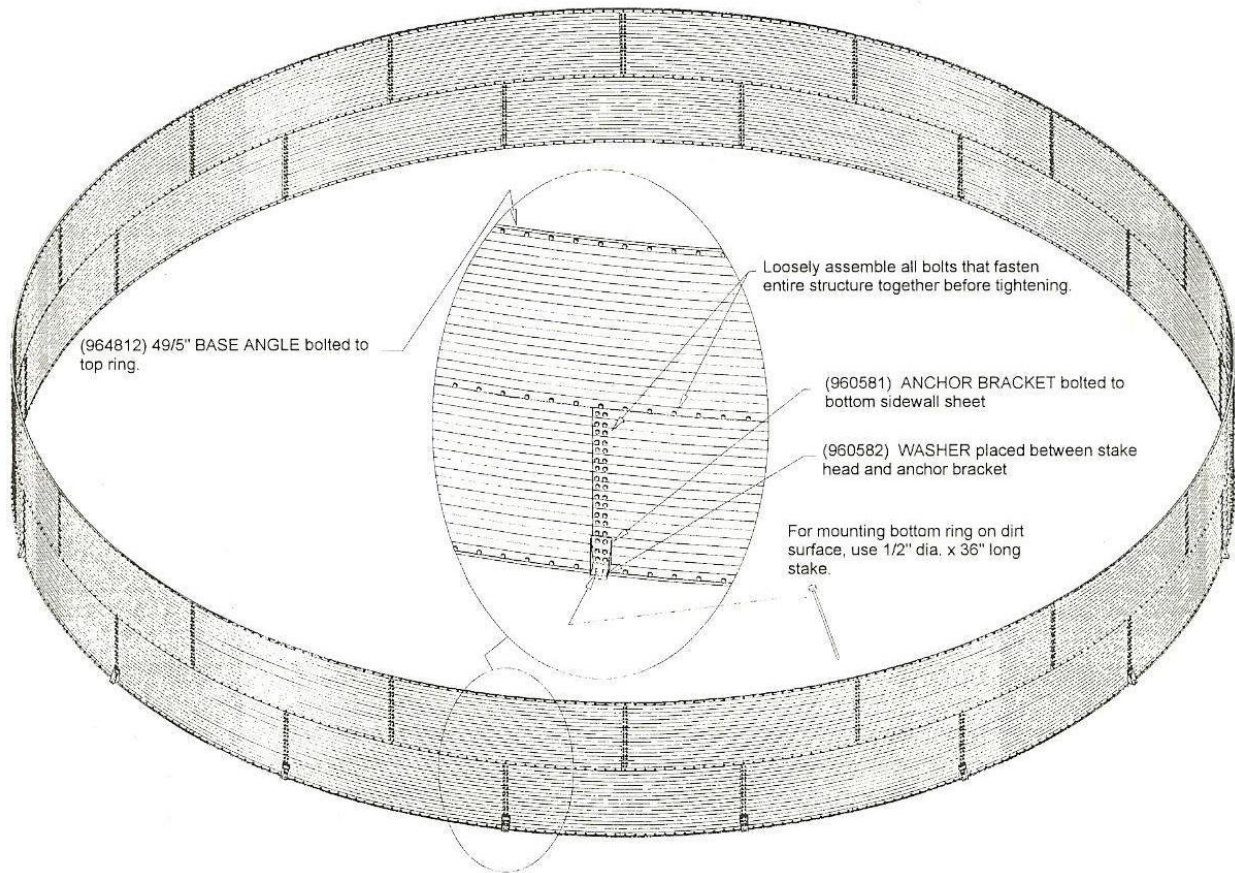

## **Eyebolt Installation**

### **Single Ring Units:**

Field drill holes approximately 8" to 10" from bottom of sheet and from seam edge, measure over 19 7/16", drill hole and install eyebolt. For each remaining hole measure over 38 13/16" until all holes are drilled.

### **Two Ring Units:**

Field drill (or use existing) 3 holes in seam between the two rings. From seam edge, measure over 19 7/16", drill hole (or use existing hole) and install eyebolt. For each remaining hole needed, measure over 38 13/16" until all holes are drilled or eyebolts are installed using the existing holes.

If you have any questions on installing the temporary bin just give us a call.

Malme Supply Inc.  
1601 7th Ave N  
Fargo, ND 58102

**Phone: 1-800-437-4604**